



GOCYCLE SERVICE NOTICE 4.1

X	RECOMMENDED	WITHOUT SERVICE ACTION, LOWER THAN EXPECTED PERFORMANCE CAN OCCUR	MANDATORY
			HIGHLY RECOMMENDED
			RECOMMENDED

Resetting the Controller

Service Issue

Controller may need rebooting.

Power to the motor can come on and off intermittently.

Corrective Action

From time to time, the controller may require rebooting—much like a PC. If it appears that the controller is not functioning correctly, such as intermittent power, perform the following reboot sequence:

- Unplug the controller from the battery pack underneath the frame. Wait for 15 seconds. Plug the controller back into the battery pack. You should here either one beep (EU mode) or two beeps (USA mode.)
- To reset to EU mode (for customers operating Gocycle within the EU): With the Gocycle at a stop (such as with the brake held on), press and hold the red power button for 7 to 10 seconds until you hear 1 beep, then release the button immediately.
- To reset to USA mode (for customers operating Gocycle with the United States): With the Gocycle at a stop (such as with the brake held on) press and hold the red power button for about 20 to 50 seconds until you hear 2 beeps, then release the button immediately.

WARNING! Operating the Gocycle in USA mode is not legal on public roads within the EU. Operating in USA mode within the EU is only legal on private property, such as a racing track.
