



## ASSEMBLY GUIDE: G2 FRONT PANNIER ROD KIT

Version 1.0



Installation of the G2 Front Pannier Rod Kit



## CONTENTS

Overview .....	1
Parts List .....	1
Tool List .....	1
1. Pannier Rod Holder Part A Installation .....	2
2. Pannier Rod Holder Part B Installation .....	4
3. Pannier Rod Installation .....	5




## OVERVIEW

This assembly guide details installation of the G2 Front Pannier Rod Kit. If you have any questions, or require any further assistance, please contact [techsupport@gocycle.com](mailto:techsupport@gocycle.com).

## PARTS LIST

To successfully complete the procedure you will require the following parts:

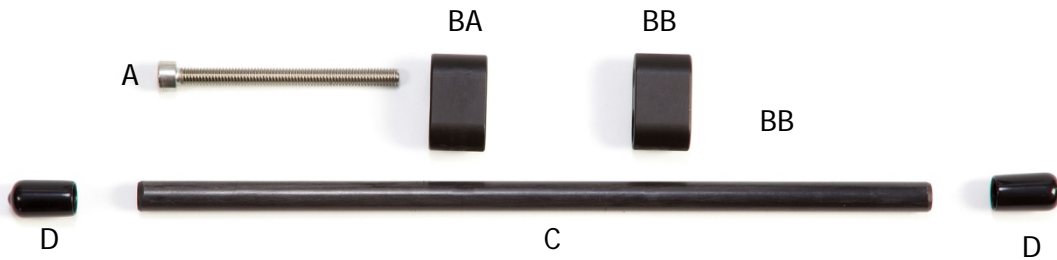

	Part Code	Part Description	Quantity
A	2406	M6x70 SS full thread	1
BA, BB	2386	G2 pannier rod holder parts A and B	1
C	2389	Pannier rod type 250mm	1
D	2390	End fitting	1

*NOTE: Pannier briefcase sold separately. See [www.gocycle.com](http://www.gocycle.com) for details.*

## TOOL LIST

To successfully complete the installation of the G2 Front Pannier Rod Kit, you will require the following tools. *You can purchase special KKL tools by their tool number detailed below.*

Part Code	Tool Description
1246	4mm Allen key
1247	5mm Allen key



## 1. PANNIER ROD HOLDER PART A INSTALLATION




1.1. Use a 4mm Allen key to undo the handlebar stem bolt, as shown.



1.2. Remove the bolt completely from the handlebar stem.

*Note: Take care to keep the handlebar in the same position. Do not twist the handlebars, as doing so may cause damage and loss of function.*

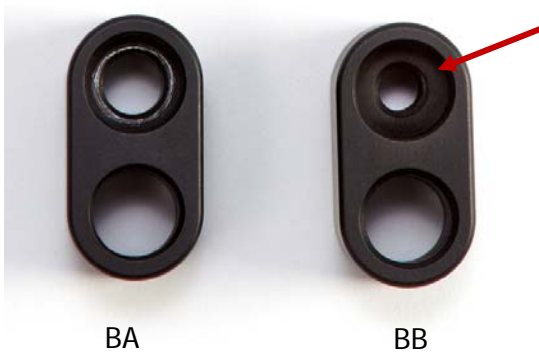

*Note the differences between Part A (BA) and Part B (BB).*

*Part B (BB) is a threaded part (indicated).*



1.3. Use Part A of the pannier rod holder (BA) and locate the M6 bolt (A) through the smaller of the two holes, as shown.



1.4. Thread the M6 Bolt (A) through Part A (BA) and through the holes in the handlebar stem.



1.5. Tighten the bolt (A) using a 5mm Allen key until Part A (BA) is flush against the handlebar stem.



## 2. PANNIER ROD HOLDER PART B INSTALLATION



2.1. Locate the threaded hole in Part B (BB) of the pannier rod holder.



2.2. Thread Part B (BB) onto the end of the M6 bolt (A).



2.3. Once Part B (BB) touches the handlebar stem, do not tighten further.



### 3. PANNIER ROD INSTALLATION



3.1. Unscrew the bolt by one complete revolution so both parts, BA and BB, are free to spin.



3.2. Now install the pannier rod (C) through parts BA and BB as shown.



3.3. Adjust the position of the pannier rod (C) so it is located centrally.



3.4. Use the 5mm Allen key to tighten the bolt (A).




*Note: The final position of the pannier rod should be as shown, in a downward position and touching the handlebar stem.*



Incorrect position! The pannier rod is upwards and is not touching the handlebar stem.



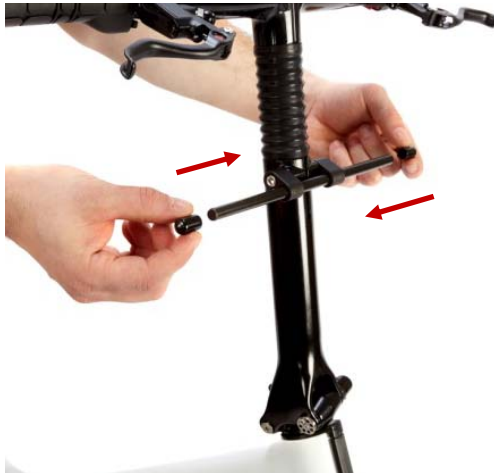

3.4. Now install both rod ends (D), as shown.

Installation of the G2 Pannier Rod Kit is complete.

3.6. A compatible pannier bag can now be fitted. See [www.gocycle.com](http://www.gocycle.com) for more details.

Note: G2 Pannier Briefcase sold separately.

---

**IMPORTANT NOTE: THE ABOVE ASSEMBLY STEPS MUST BE CARRIED OUT IN ORDER. FAILING TO DO SO MAY RESULT IN DAMAGE TO THE GOCYCLE.**

---

If you have any further queries or comments, please contact Gocycle Technical Support:

[techsupport@gocycle.com](mailto:techsupport@gocycle.com)